

INDEX

1.	<u>BEFORE PROCEEDING</u>	<u>4</u>
1.1	CHECK THE SW REL. OF THE XC645D	4
2.	<u>GENERAL WARNING</u>	<u>4</u>
2.1	 PLEASE READ BEFORE USING THIS MANUAL	4
2.2	 SAFETY PRECAUTIONS	4
3.	<u>GENERAL DESCRIPTION</u>	<u>5</u>
4.	<u>COMPONENTS RELATED TO THE XC645D</u>	<u>5</u>
4.1	PP07, PP11, PP30 PP50: 4÷20mA PRESSURE TRANSDUCERS	5
4.2	NP4-67: PIPE MOUNTING TEMPERATURE PROBE	5
5.	<u>WIRING & ELECTRICAL CONNECTIONS</u>	<u>6</u>
5.1	GENERAL WARNINGS	6
5.2	WIRING CONNECTIONS	6
5.3	PROBES CONNECTION	6
5.4	SAFETY DIGITAL INPUTS AND PRESSURE SWITCHES	7
5.5	LOAD CONNECTIONS	7
6.	<u>MOUNTING & INSTALLATION</u>	<u>9</u>
7.	<u>FIRST INSTALLATION</u>	<u>10</u>
7.1	HOW TO SET THE KIND OF GAS	10
7.2	HOW TO SET THE RANGE OF THE PRESSURE PROBES	10
8.	<u>USER INTERFACE</u>	<u>11</u>
8.1	DISPLAYING	11
8.2	KEYBOARD	11
8.3	ICONS	12
9.	<u>HOW TO SEE AND MODIFY THE SET POINT(S)</u>	<u>13</u>
9.1	HOW TO SEE THE SET POINT OF COMPRESSORS AND/OR FANS	13
9.2	HOW TO MODIFY THE SET POINT OF COMPRESSORS AND/OR FANS	13
10.	<u>THE INFO MENU</u>	<u>13</u>
11.	<u>PARAMETERS PROGRAMMING</u>	<u>14</u>
11.1	HOW TO ENTER THE "PR1" PARAMETER LIST	14
11.2	HOW TO ENTER IN PARAMETERS LIST "PR2"	14
11.3	HOW TO CHANGE PARAMETER VALUES	15
12.	<u>HOW TO DISABLED AN OUTPUT</u>	<u>15</u>
12.1	HOW TO DISABLED AN OUTPUT DURING A MAINTENANCE SESSION.	15

12.2	OUTPUT DISABLED SIGNALING.	15
12.3	REGULATION WITH SOME OUTPUTS DISABLED.	15
13.	<u>RUNNING HOURS OF LOADS</u>	16
13.1	HOW TO DISPLAY THE RUNNING HOURS OF A LOAD.	16
13.2	HOW TO RESET THE RUNNING HOURS OF A LOAD.	16
14.	<u>ALARM MENU</u>	16
14.1	HOW TO SEE THE ALARMS	16
15.	<u>KEYBOARD LOCKING</u>	17
15.1	HOW TO LOCK THE KEYBOARD	17
15.2	TO UNLOCK THE KEYBOARD	17
16.	<u>USE OF THE PROGRAMMING “HOT KEY “</u>	17
16.1	HOW TO PROGRAM A HOT KEY FROM THE INSTRUMENT (UPLOAD)	17
16.2	HOW TO PROGRAM AN INSTRUMENT USING A HOT KEY (DOWNLOAD)	17
17.	<u>LIST OF PARAMETERS</u>	17
17.1	PLANT DIMENSIONING AND TYPE OF REGULATION.	17
17.2	PROBES CONFIGURATION	19
17.3	CONFIGURABLE DIGITAL INPUTS CONFIGURATION	21
17.4	DISPLAY AND MEASUREMENT UNIT	22
17.5	COMPRESSOR REGULATION	22
17.6	LIQUID INJECTION THERMOSTAT	23
17.7	FANS REGULATION	24
17.8	ALARMS – COMPRESSOR SECTION	24
17.9	ALARMS – DLT SECTION	25
17.10	ALARMS – FANS SECTION	25
17.11	DYNAMIC SET POINT FOR FAN	25
17.12	ANALOG OUTPUT (OPTIONAL)	26
17.13	OTHER	26
18.	<u>TYPE OF REGULATION</u>	27
18.1	DIGITAL COMPRESSOR REGULATION	27
18.2	PROPORTIONAL BAND REGULATION - ONLY FOR FANS	30
18.3	CONDENSER WITH INVERTER OR ECI FANS– ANALOG OUTPUT SETTING	31
19.	<u>ALARM LIST</u>	31
19.1	TYPES OF ALARMS AND SIGNALING MANAGED	32
19.2	BUZZER MUTING	34
19.3	ALARM CONDITIONS – SUMMARY TABLE	34
20.	<u>TECHNICAL FEATURES</u>	36
21.	<u>PARAMETERS – DEFAULT VALUES</u>	37

1. BEFORE PROCEEDING

1.1 Check the sw rel. of the XC645D

1. Look at the SW rel. of XC64D printed on the label of the controller.



2. If the SW release is 3.0, proceed with this manual otherwise contact Dixell to get the right manual.

2. GENERAL WARNING

2.1 Please read before using this manual

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.
- Dixell Srl reserves the right to change the composition of its products, even without notice, ensuring the same and unchanged functionality.

2.2 Safety Precautions

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.r.l." (See address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- Fit the probe where it is not accessible by the end user.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

3. General description

The XC645D is designed to manage both compressors and fans in a condensing system such as a pack.

The compressors can be digital scroll or Stream, simple, multistage.

Control is by means of a neutral zone and is based on the pressure or temperature sensed in the LP suction (compressors) and HP (condenser) circuits. A special algorithm balances the run hours of the compressors to distribute the work load uniformly.

The controllers can convert both LP and HP pressures and displays them as temperatures.

The front panel offers complete information on the system's status by displaying the suction and condenser pressure (temperatures), the status of the loads, possible alarms or maintenance conditions.

Each load has its own alarm input that is able to stop it when activated. To guarantee the total system's safety, there are also two inputs for low and high pressure switches: when these are activated, the system is stopped.

By means of the HOT KEY the controller can be easily programmed at power on.

The controller can be connected to the X-WEB, controlling and monitoring system, thanks to the RS485 serial output, using the standard ModBus RTU protocol.


4. COMPONENTS RELATED TO THE XC645D

Name	Description	Part number
4-20mA suction pressure transducer	PP11 (-0.5÷11bar)	BE009302 07
4-20mA condenser pressure transducer	PP30 (0÷30bar)	BE009302 04
Hot key for programming	HOT KEY 4K	DK00000100

4.1 PP07, PP11, PP30 PP50: 4÷20mA pressure transducers

PP07	2,0MT	-0,5+7bar rel FE	cod BE009302 00
PP11	2,0MT	-0,5+7bar rel FE	cod BE009302 07
PP30	2,0MT	0+307bar rel FE	cod BE009302 04
PP50	2,0MT	0+507bar rel FE	cod BE009002 05

4.2 NP4-67: pipe mounting temperature probe

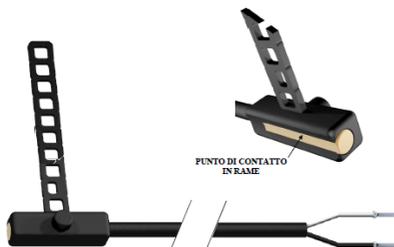

The **NP4-67** temperature probe can be used on the discharge line to monitor the discharge temperature of the Digital Scroll compressor.

NP4-67 1.5MT NTC probe
Measurement range: -40+110°C,
Cable 1,5mt
Code BN609001 52

5. WIRING & ELECTRICAL CONNECTIONS


5.1 General warnings

Before connecting cables make sure the power supply complies with the instrument's requirements.

Separate the probe cables from the power supply cables, from the outputs and the power connections.

Do not exceed the maximum current allowed on each relay 5A resistive, in case of heavier loads use a suitable external relay.

5.2 Wiring connections

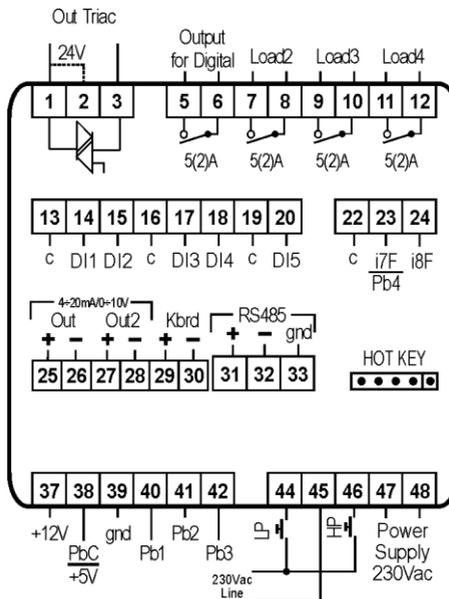

NOTE

120V version: use terminals 47-48 for power supply: Terminals 44-45-46 operate at 120V

24V version: use terminals 47-48 for power supply; Short circuit terminal 1-2.

5.3 Probes connection

5.3.1 General warnings

Pressure probe (4 - 20mA): respect the polarity. If using terminal ends be sure there are no bear parts which could cause short circuiting or introduce noise disturbance at high frequencies. To minimize the induced disturbances use shielded cables with the shield connected to earth.

Temperature probe: it is recommended to place the temperature probe away from direct air streams to correctly measure the temperature.

5.3.2 Probe wirings

Low voltage side: Keep the cables away from the power cables. Use shielded cable to lengthen the cables.

NOTE1: The PIN 38 is the common line for the temperature probes


NOTE2: The PIN 37 gives a 12Vdc supply for the 4-20mA pressure transducers

<p>PP07 PP11, PP30, PP50 4÷20mA pressure transducers respect the polarity. Suction (P1C = Cur) Brown (+) to terminal 37; white (-) to terminal 40 Condenser (P2C = Cur) Brown (+) to terminal 37; white (-) to terminal 41</p>	
<p>Temperature probes (NTC 10K) Suction: 38-40 (P1C = NTC) Condenser: 38-41 (P2C = NTC) Pb3 (P3C = NTC): 38-42 Pb4 (P4C = NTC): 38-42</p>	
<p>Ratiometric transducers (0.5÷4.5Vdc) Suction (P1C = 0-5) 40 (In); 38(+); 39 (gnd) Condenser (P2C =0-5) 41 (In); 38(+); 39 (gnd)</p>	


5.4 LOAD CONNECTIONS

!!!WARNING: Digital Scroll valve coil can operate at main voltage (230Vac or 115Vac) or 24Vac. In case of 24Vac short circuit terminals 1-2.

5.4.1 Connections for models at 230V or 115V and coil of digital valve at 115 or 230V.

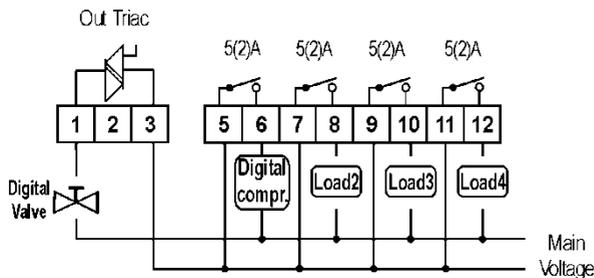

5.4.2 Connections for models at 230V or 115V or 24V and coil of digital valve at 24V.

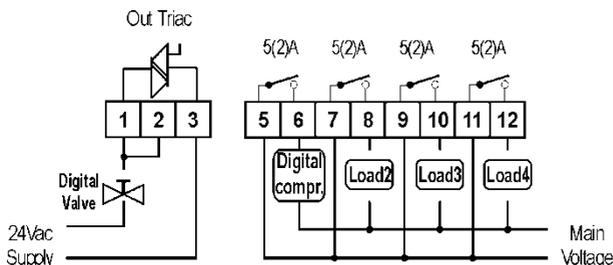

5.5 SAFETY AND CONFIGURABLE DIGITAL INPUTS – FREE VOLTAGE

5.5.1 Load safety inputs

Each load has its own safety input, free voltage. This input has to collect the status of the safety devices related to the compressor such as thermistors, pressure switches etc.

When this input is activated the correspondence load is switched off and not considered for the regulation.

The correspondence between loads (compressors or fans) and safety inputs is the following

LOAD	TERMINALS	SAFETY INPUT	TERMINALS	CONNECTION
Load 1 (digital)	5-6	Di1	13-14	
Load 2	7-8	Di2	13-15	
Load 3	9-10	Di3	16-17	
Load 4	11-12	Di4	16-18	

5.5.2 Configurable digital inputs.

The controller XC645D is provided with 2 configurable digital inputs, the first one can operate also as probe. Their functions are set by the parameter iF07 and iF08 respectively.

They can be used for liquid level monitoring, activate the energy saving function or silence mode from a external devices.

The digital input connection is explain in the following table

Digital input	TERMINALS	Related parameter	CONNECTION
First configurable input/Probe 4	22-23 (i1F/Pb4)	iF07: function iP07: polarity	
Second configurable d.i.	22-24 (i2F)	iF08: function iP08: polarity	


5.6 HP – LP Pressure switches connection

!!!WARNING: controller is provided with both free voltage digital inputs, and main voltage inputs.!!!!

The main voltage inputs are designed for HP and LP pressure switches.

The **low pressure switch** has to be connected to the terminal 44 (line) and 45 (common)

The **high pressure switch** has to be connected to the terminal 45 (common) and 46 (line) as shown on the following wiring diagram.

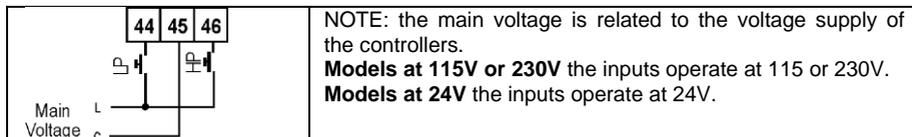


5.7 Analog output connection

The controller supply up to 2 analog outputs, terminals, kind of output and functionality are shown in the following table

	Terminals	Related parameter
Analog output 1	25[+] – 26[-].	AOC: Kind of signal (4-20mA/0-10V) AOF: function
Analog output 2	27[+] – 28[-].	2AOC: Kind of signal (4-20mA/0-10V) 2AOF: function

5.8 How to connect monitoring system - RS485 Serial line

The **Adr** parameter is the number to identify each electronic board. **Address duplication is not permitted**, in this case the communication with monitoring system is not guaranteed (the **Adr** is also the ModBUS address).

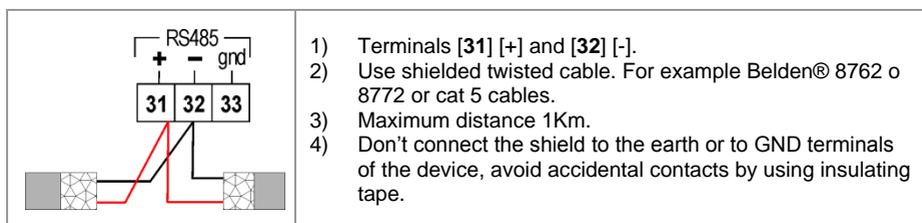

6. Mounting & installation

The instruments are suitable only for internal use.

Instrument **XC645D** shall be mounted on an omega DIN rail

The ambient operating temperature range is between -10÷60°C.

Avoid locations subject to heavy vibration, corrosive gases or excessive dirt. The same applies to the probes. Ensure ventilation around the instrument.

7. First installation

At first installation, it's necessary the following:

1. **Select the kind of gas.**
2. **Set the range of the pressure probes.**

In the following paragraph a short cut for the above operations.

Chapters 11 Parameters programming and 17 will show in detail these operations.

7.1 How to set the kind of gas

The kind of gas is set by the parameter FtyP.

The controller has memorized the relation between temperature and pressure for some gases.

The pre-set gas is: r404. (FtyP=404)

If another gas is used, act as in the following:

1. Enter the Programming mode by pressing the **Set** and **DOWN** key for 3s.
2. Select the "**Pr2**" parameter. Then enter the password **3 2 1 0**.
3. Select the **FtyP, kind of gas**, parameter.
4. Press the "**SET**" key: the value of the parameter will start blinking.
5. Use "**UP**" or "**DOWN**" to change the gas among the following: **r22= R22; r404=R404A; -407A = r407A; 407C= r407C; 407F= r407F; 410= r410; 507=R507; 134=134; 134 r134; CO2= CO2**. Press "**SET**" to store the new value and move to the following parameter.

To exit: Press SET + UP or wait 30s without pressing a key.

NOTE: the set value is stored even when the procedure is exited by waiting the time-out to expire.

7.2 How to set the range of the pressure probes

If an instrument with the following part number is used: XC645D – xxxxF, it is pre-set to work with pressure probe with the following range:

Suction Probe : -0.5 ÷11.0 bar (relative pressure);

Discharge Probe : 0÷30.0 bar (relative pressure)

If the probes you're using have a different range act as in the following:

To set the pressure range of the **Probe 1 (suction probe)** use the parameter:

PA04: Adjustment of read out corresponding to 4mA (0.5V)

PA20: Adjustment of read out corresponding to 20mA (4.5V)

To set the pressure range of the **Probe 2 (Condenser probe)** use the parameter:

FA04: Adjustment of read out corresponding to 4mA (0.5V)

FA20: Adjustment of read out corresponding to 20mA (4.5V)

Practically these parameters have to be set with the start and end scale of the probe range.


How to do:

1. Enter the Programming mode by pressing the **Set** and **DOWN** key for 3s.
1. Select the "**Pr2**" parameter. Then enter the password **3 2 1 0**.
3. Select the **PA04, adjustment of read out corresponding to 4mA (0.5V)**, parameter.

4. Press the “**SET**” key: the value of the parameter will start blinking.
5. Set the lower value of the probe range.
6. Push the **SET** key to confirm the value. The **PA20: adjustment of read out corresponding to 20mA (4.5V)** parameter will be displayed.
7. Set the higher value of the range.
8. Push the **SET** key to confirm the value. Next parameter will be displayed.

Do the same things for the Probe 2, **FA04**, **FA20** parameters.

8. User interface

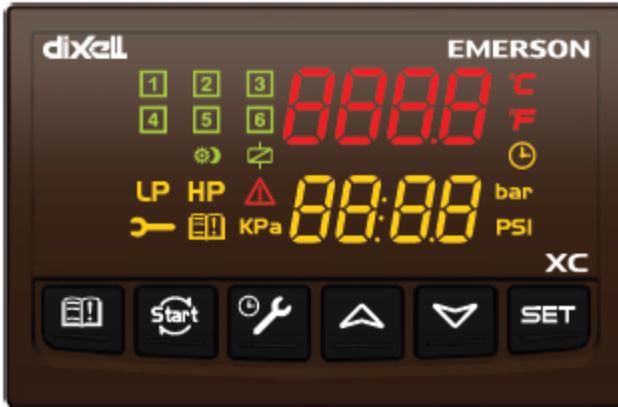

8.1 Displaying

UPPER DISPLAY	LOWER DISPLAY	ICONS
Suction temperature or pressure	Discharge temperature or pressure	- Working loads - Measurement unit - Alarm or status Icons

8.2 Keyboard

SET (SET)

Standard visualization: to see or modify the set point. In programming mode it selects a parameter or confirms an operation.

Alarm menu: By holding it pressed for **3s**, the current alarm is erased.

^ (UP).

In programming mode: it browses the parameter codes or increases the displayed value.

With Hot key inserted: it starts the Hot key programming procedure.

To access the INFO menu: push and release it to access the INFO menu.

▼ (DOWN)

In programming mode: it browses the parameter codes or decreases the displayed value.



Manual restart of loads: By holding it pressed for **3s**, it switches on again loads previous locked by a safety digital input alarm.



MAINTENANCE/CLOCK: To display the loads running hours
By holding it pressed for 3s the **Maintaining menu** is entered



To enter the Alarm menu

KEY COMBINATIONS

▲ + ▼ To lock and unlock the keyboard.

SET + ▼ To enter the programming mode.

SET + ▲ To exit the programming mode.

8.3 Icons

LED	FUNCTION	MEANING
°C	ON	Celsius degrees
°F	ON	Fahrenheit degrees
bar	ON	bar displaying
PSI	ON	PSI displaying
kPa	ON	KPA displaying
1	ON	Digital scroll compressor (DGS) on
1	Flashing	DGS is waiting to start (1HZ) or digital input alarm for DGS (2Hz). or DGS in maintenance status (2Hz).
2	ON	Load 2 on
2	Flashing	Load 2 is waiting to start (1HZ). or digital input alarm for Load 2 (2Hz). or Load 2 in maintenance status (2Hz).
3	ON	Load 3 on
3	Flashing	Load 3 is waiting to start (1HZ). or digital input alarm for Load 3 (2Hz). o Load 3 in maintenance status (2Hz).
4	ON	Load 4 on
4	Flashing	Load 4 is waiting to start (1HZ). or digital input alarm for Load 4 (2Hz). o Load 4 in maintenance status (2Hz).
	ON	The valve of the Digital scroll compressor is energized
	ON	The Maintenance menu has been entered
	Flashing	One or more loads have been placed in maintenance status
LP	ON	Low pressure switch alarm
HP	ON	High pressure switch alarm
	ON	Alarm is happening
	ON	All the stored alarms have been seen.
	Flashing	A new alarm has happened
	ON	Energy saving activated

9. How to see and modify the set point(s)

9.1 How to see the set point of compressors and/or fans

If the controller is managing both compressors and fans, both the set points are displayed in sequence, otherwise only the set point of the enabled section will be displayed.

- 1) Push and release the **SET** key;
- 2) The Lower display will show the “**SEtC**” label, will the Upper display will show its value.
- 3) To see the fan set point, push again the **SET** key.
- 4) The Lower display will show the “**SEtF**” label, will the Upper display will show the fan set point.

To exit: push the **SET** key or wait for 30 without pressing any keys.

9.2 How to modify the set point of compressors and/or fans

*******WARNING: before setting the target set points for the first time, check and, if necessary, modify the type of refrigerant gas (par. FtyP) and the default unit of measurement (par. dEU) for compressors and fans *******

PRE-ACTION

1. **Set the kind of refrigerant by means of the FtyP parameter (see 7.1 How to set the kind of gas)**
2. **Set the measurement unit (dEU par.).**
3. **Check and if necessary modify the set point limits (LSE and HSE par.).**

PROCEDURE

1. Push the **SET** key for more than 2 seconds;
2. The Lower display will show the “**SEtC**” label, will the Upper display will show its value flashing.
3. To change the Set value, push the **▲** or **▼** within 30s.
4. To memorize the new value and pass to the fan set point, push the **SET** key.
5. The Lower display will show the “**SEtF**” label, will the Upper display will show the fan set point flashing.
6. To change its value, push the **▲** or **▼** within 30s.

To exit: push the **SET** key or wait for 30 without pressing any keys.

10. The INFO menu

The controller can display some information directly from the main menu.
The INFO menu is accessible by pushing and releasing the **UP** key:

Here below the list of the information that can be displayed:

NOTE: this information is displayed only if the related function is enabled

- **P1t:** temperature value of the P1 probe
- **P1P:** pressure value of the P1 probe
- **P2t:** temperature value of the P2 probe
- **P2P:** pressure value of the P2 probe (if P2 present)
- **P3t:** temperature value of the P3 probe (if P3 present)
- **P3P:** pressure value of the P3 probe (if P3 present)
- **P4t:** temperature value of the P4 probe (if P4 present)

- **LinJ**: status of the injection output (“On” – “OFF”), This information is available only if one relay, oA2 ÷ oA4 is set as “Lin”.
- **SEtd**: value of the **Dynamic Set point**. This information is available only if the Dynamic set point function is enabled (par. dSEP ≠ nP)
- **dStO**: percentage of the PWM output driving the valve of the Digital Scroll compressor.
- **dSF**: value of temperature or pressure when the regulation filter of Digital Scroll compressor is enabled (par. dFE=YES). The “regulation filter” function calculates the average value of the pressure/temperature during a PWM cycle, and uses this value for the control algorithm
- **AO1** Percentage of the analog output 1 (4-20mA or 0-10V).
- This information is always available
- **AO2**: Percentage of the analog output 2 (4-20mA or 0-10V).
- This information is always available
- **SSC1: Supervising Set for circuit 1**, if supervising system is sending the set point to the controller
- **SSC2: Supervising Set for circuit 2**, if supervising system is sending the set point to the controller
- **SStF: Supervising Set for fan**, if supervising system is sending the set point to the controller

EXIT: push the **SET+UP** keys together.

11. Parameters programming

11.1 How to enter the “Pr1” parameter list

To enter the “Pr1” parameter list, user accessible, operate as follows:

1. Hold pressed the **SET** and **DOWN** key for 3s.
2. The controller displays the name of the parameter in the Lower display, its value on the Upper display.
3. Press the “**SET**” key: the value of the parameter will start blinking.
4. Use “**UP**” or “**DOWN**” to change the value.
5. Press “**SET**” to store the new value and move to the following parameter.

To exit: Press **SET + UP** or wait 30s without pressing a key.

NOTE: the set value is stored even when the procedure is exited by waiting the time-out to expire.

11.2 How to enter in parameters list “Pr2”

The “Pr2” parameter list is protected by a security code (Password).

SECURITY CODE is 3210

To access parameters in “**Pr2**”:

1. Enter the “Pr1” level.
2. Select “Pr2” parameter and press the “**SET**” key.
3. The flashing value “0 ---” is displayed.
4. Use **▲** or **▼** to input the security code and confirm the figure by pressing “**SET**” key.
5. Repeat operations 2 and 3 for the other digits.

NOTE: each parameter in “Pr2” can be removed or put into “Pr1” (user level) by pressing “**SET**” + **▼**. When a parameter is present also in “Pr1” decimal point of the lower display is on.

11.3 How to change parameter values

1. Enter the Programming mode.
2. Select the required parameter with **▲** or **▼**.
3. Press the “**SET**” key the value start blinking.
4. Use **▲** or **▼** to change its value.
5. Press “**SET**” to store the new value and move to the following parameter.

To exit: Press **SET + UP** or wait 15s without pressing a key.

NOTE: the new programming is stored even when the procedure is exited by waiting the time-out.

12. How to disabled an output

To disabled an output during a maintenance session means to exclude the output from the regulation.

12.1 How to disabled an output during a maintenance session.

1. Push the **MAINTENANCE/CLOCK** () key for 3s.
2. The LED's of the first output is switched on, the Lower display shows the “**StA**” label, while the Upper display shows the “**On**” label if the first output is enabled, or the “**oFF**” label if the output is disabled for a maintenance section.
With compressor with more steps all the LED's linked to the compressor and the valves are switched on..
3. Select the output by pressing the **UP** or **DOWN** key.
4. **To modify the status of the output:** push the **SET** key, the status of the output starts flashing, then push the UP or DOWN to pass from “**On**” to “**oFF**” and vice versa.
5. Push the **SET** key to confirm the status and pass to the next output..

To exit: push the **CLOCK** key or wait 30 sec

12.2 Output disabled signaling.

If an output is disabled its led blinks (2 Hz)

12.3 Regulation with some outputs disabled.

If some outputs are disabled they don't take part to the regulation, so the regulation goes on with the other outputs.

13. Running hours of loads

13.1 How to display the running hours of a load.

The controller memorizes the running hours of each load.

To see how long a load has been working follow this procedure:

1. Press and release the “**MAINTENANCE/CLOCK** ()” key.
2. The LED of the first output is switched on, the **Upper Display** shows the “**HUr**” label, while the **Lower Display** shows the running hours of the first output.
3. To see the running hours of the following load press the UP key .

To exit: push the  key or wait 30 sec

13.2 How to reset the running hours of a load.

1. Display the running hour according to the above procedure.
2. Select the load by pressing the UP key.
3. Push the **SET** key (immediately on the lower display the **rSt** label is displayed).
4. Hold pushed the key for some seconds till the “**rSt**” label starts flashing and the lower display shows zero.

To exit: push the **CLOCK** key or wait 30 sec

NOTE: if the **SET** key is released within 2s, the controller reverts to display the running hours of the selected loads..

14. Alarm Menu

The controller memorizes the last 20 alarms happened, together with their duration..

To see the alarm codes see par. **par. 19**.

14.1 How to see the alarms

1. Push the  **Alarm** key.
2. The last alarm happened is showed on the Upper display, while the lower display shows its number.
3. Push again the **▲** key and the other alarm are displayed starting from the most recent.
4. To see the alarm **duration** and push the **SET** key.
5. By pushing again the **▲** or **SET** key the next alarm is displayed.

Alarms erasing.

1. Enter the Alarm Menu.
2. To erase the displayed alarm push the “**SET**” key till the “**rSt**” label will be displayed in the Lower Display,
NOTE the running alarms cannot be erased..
3. To erase the whole Alarm Menu, hold pressed the “**SET**” key for 10s.

15. Keyboard locking

15.1 How to lock the keyboard

1. Keep the ▲ and ▼ keys pressed together for more than 3 s the ▲ and ▼ keys.
2. The “POF” message will be displayed and the keyboard is locked. At this point it is only possible to view the set point or enter the HACCP menu.

15.2 To unlock the keyboard

Keep the ▲ and ▼ keys pressed together for more than 3s till the “POn” flashing message appears.

16. Use of the programming “HOT KEY “

16.1 How to program a hot key from the instrument (UPLOAD)

1. Program one controller with the front keypad.
2. When the controller is ON, insert the “Hot key” and push ▲ key; the “uPL” message appears followed a by flashing “End”
3. Push “SET” key and the End will stop flashing.
4. Turn OFF the instrument remove the “Hot Key”, then turn it ON again.

NOTE: the “Err” message is displayed for failed programming. In this case push again ▲ key if you want to restart the upload again or remove the “Hot key” to abort the operation.

16.2 How to program an instrument using a hot key (DOWNLOAD)

1. Turn OFF the instrument.
2. Insert a **programmed “Hot Key” into the 5 PIN receptacle** and then turn the Controller ON.
3. Automatically the parameter list of the “Hot Key” is downloaded into the Controller memory, the “doL” message is blinking followed a by flashing “End”.
4. After 10 seconds the instrument will restart working with the new parameters.
5. Remove the “Hot Key”..

NOTE the message “Err” is displayed for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the “Hot key” to abort the operation.

The unit can UPLOAD or DOWNLOAD the parameter list from its own E2 internal memory to the “Hot Key” and vice-versa.

17. List of parameters

17.1 Plant dimensioning and type of regulation.

The XC645D is pre-set to drive a **Digital Scroll compressor**.

The relay **oA1 (term. 5-6)**, is set to manage the Digital Scroll compressor, while the TRIAC output 1-3 drives its solenoid valve.

oA2 (term. 7-8), oA3 (term. 9-10), oA4 (term. 11-12), outputs 2 3 4 configuration: by means of these parameters the plant can be dimensioned according to the number and type of compressors and/or fans and the number of steps for each one.

Each relay according to the configuration of the oA(i) parameter can work as:

- **Not used:** oAi = nu
- **Compressor circuit1:** oAi = cPr1,
- **Step:** oAi = StP
- **Digital Scroll or Stream:** oAi = dGS
- **Blocked suction valve of Stream 6D:** oAi = 6dG
- **Fan:** oAi = FAn
- **Fan with inverter/ECI fan:** oAi = InF
- **Alarm:** oAi = ALr
- **Injection of cooling liquid:** oAi = Lin

NOTE: also the “cPr2”, “InC1”, “InC2”, “dGst” values are present. These values **must not** be used..

According to the oA1, oA2, oA3, oA4 configuration, 2 kinds of plant can be defined:

Rack with compressors only: all the oAi different from FAn


Rack with compressors and fans: both FAn and CPr are used for oAi.


NOTE: COMPRESSOR WITH STEPS CONFIGURATION: the output of compressor has to be set before the output of the step.

ES. Compressor with 1 step: oA2 = cPr, oA3= StP.

If an oAi set as step without any previous oAi set as cPr the configuration alarm “CStP” will be activated.

PLANT CONFIGURATION EXEMPLES:

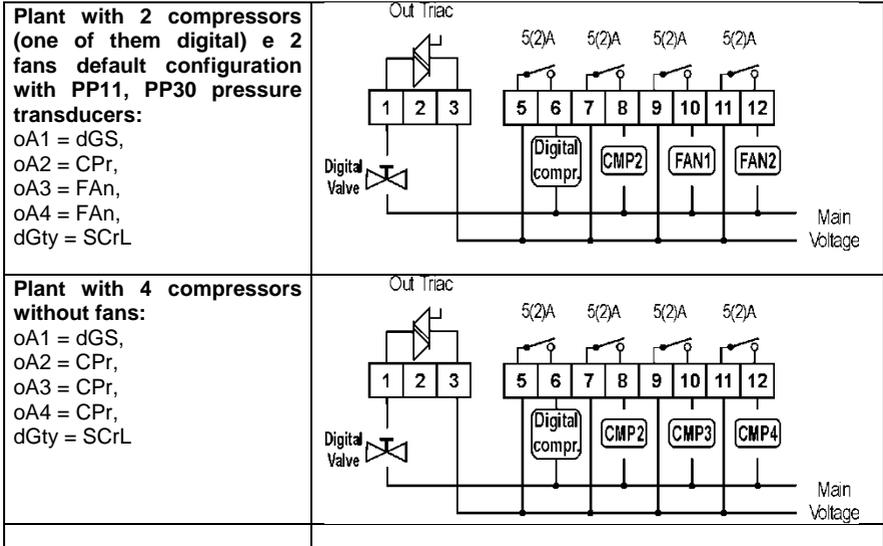

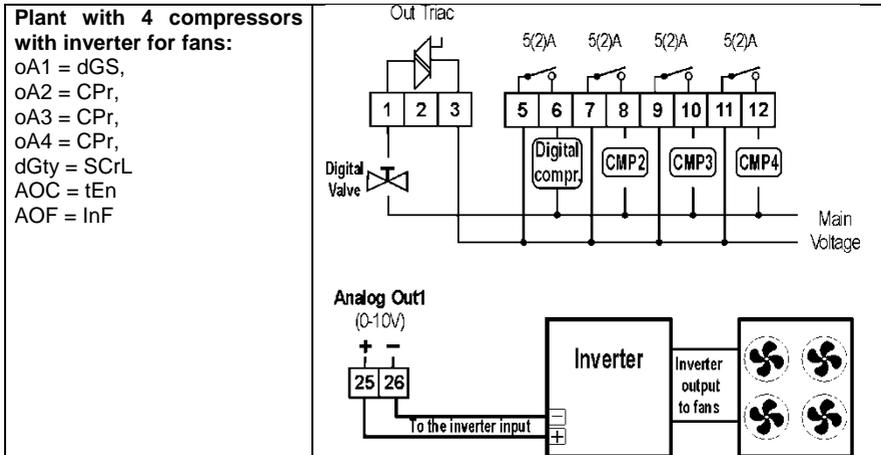

dGty Kind of digital compressor

SCrL = Digital Scroll: the range of capacity modulation starts from 10% to 100%

StrM = Digital Stream: the range of capacity modulation starts from 0% to 100%

StP **Valve outputs (unloader) polarity:** polarity of the outputs for capacity valves. It determines the status of the relays associated with the capacity valves (only for homogeneous and stepped-capacity compressors)

oP=valve activated with open contacts of the relay;

cL= valve activated with close contacts of the relay.

FtyP: **Freon Type:** set the kind of freon used in the plant : **r22**= R22; **r404**=R404A; - **407A** = r407A; **407C**= r407C; **407F**= r407F; **410**= r410A; **507**=R507; **134**=134; **134**= r134; **CO2**= CO2 (carbon dioxide).

rTy: **Type of regulation (see par. 18):**

db = neutral zone, - **set this kind of regulation for rack with digital scroll.**

Pb = proportional band.

Sty **Compressors rotation enabling**

YES = **rotation enabled** : this algorithm distributes the working time between the various compressors to ensure even run times.

no = **fixed sequence:** the compressors are enabled and disabled in fixed sequence: first, second etc.

NOTE: The **digital scroll compressor** is always started as first and switched off as last. In any case, if it is locked because of safety timers, it can be started to maintain the pressure in the regulation band. See par. dGSP

rot **Fan rotation enabling**

YES = **rotation enabled:** this algorithm distributes the working time between the various fans to ensure even run times.

no = **fixed sequence:** the fans are enabled and disabled in fixed sequence: first, second etc.

17.2 Probes configuration

Probes can be used in different ways according to plant features, as described in the following table:

17.2.1 Suction probe configuration

P1c: **Suction probe setting (probe 1):**

nP = not used: don't set it;

Cur = 4 ÷ 20 mA pressure transducer; use term. 37(+), 40 (in); 39 (gnd) if present
tEn = 0.5÷4.5V ratiometric pressure transducer; use term. **38**(+), 40 (in); 39 (gnd)
ntc = NTC 10K probe; use term. 38-40

PA04: **Adjustment of read out for the Probe 1** (used only if P1c=Cur or tEn). Corresponding to **4mA or 0.5V** input signal, given by the suction probe (-1.0 ÷ PA20bar; -15÷PA20PSI; -100 ÷ PA20KPA)

E.I. PP11 relative pressure transducer, range -0.5÷11.0 bar. PA04=-0.5; PA20=11.0

PP30 relative pressure transducer, range: 0÷30bar. PA04=0.0; PA20=30.0.

PA20: **Adjustment of read out for the Probe 1** corresponding to **20mA or 4.5V** input signal, given by the suction probe (PA04 ÷ 51.0BAR; PA04 ÷ 750PSI; PA04 ÷ 5100KPA).

CAL: **Probe 1 calibration:** the range depends on the dEU parameter:

dEU=bar or °C: -12.0÷12.0;

dEU=PSI or °F: -200÷200;

dEU=kPA: -999÷999;

17.2.2 Condenser probe configuration

P2c: **Condenser probe setting (probe 2):**

nP = not used:

Cur = 4 ÷ 20 mA pressure transducer; use term. 37(+), 41 (in); 39 (gnd) if present

tEn = 0.5÷4.5V ratiometric pressure transducer; use term. **38**(+), 41 (in); 39 (gnd)

ntc = NTC 10K probe; use term. 38- 41

FA04: **Adjustment of read out for the Probe 2** (used only if P2c=Cur or tEn). corresponding to **4mA or 0.5V** input signal, given by the delivery probe (-1.0 ÷ FA20bar; -15÷FA20PSI; -100 ÷ FA20KPA)

FA20: **Adjustment of read out for the Probe 2** corresponding to **20mA or 4.5V** input signal, given by the condensing probe (FA04 ÷ 51.0BAR; FA04 ÷ 750PSI; FA04 ÷ 5100KPA)

FCAL: **Probe 2 calibration** the range depends on the dEU parameter:

dEU=bar or °C: -12.0÷12.0;

dEU=PSI or °F: -200÷200;

dEU=kPA: -999÷999;

17.2.3 Probe 3 configuration

P3c: **Probe 3 setting:**

nP = not used:

Cur = 4 ÷ 20 mA pressure transducer; use term. 37(+), 42 (in); 39 (gnd) if present

tEn = 0.5÷4.5V ratiometric pressure transducer; use term. **38**(+), 42 (in); 39 (gnd)

nt10 = NTC 10K 38-42

nt86 = NTC 86K 38-42

3P04: **Adjustment of read out for the Probe 3** (used only if P3c=Cur or tEn). corresponding to **4mA or 0.5V** input signal, given by the delivery probe (-1.0 ÷ FA20bar; -15÷FA20PSI; -100 ÷ FA20KPA)

3P20: **Adjustment of read out for the Probe 3** corresponding to **20mA or 4.5V** input signal, given by the condensing probe (FA04 ÷ 51.0BAR; FA04 ÷ 750PSI; FA04 ÷ 5100KPA)

O3: **Probe 3 calibration** the range depends on the dEU parameter:

dEU=bar or °C: -12.0÷12.0;

dEU=PSI or °F: -200÷200;

dEU=kPA: -999÷999;

17.2.4 Probe 4 configuration

P4c: **Probe 4 setting (22-23):**

nP = not used:

nt10 = NTC 10K 38-42

nt86 = NTC 86K 38-42

O4: **Probe 4 calibration** the range depends on the dEU parameter:

dEU= °C: -12.0÷12.0;

dEU= °F: -200÷200;

17.2.5 Probe selection for fan

FPb: Probe selection for condenser fan

nP = not used:

P1 = Probe 1

P2 = Probe 2

P3 = Probe 3

17.3 Configurable digital inputs configuration

iF07 Configurable digital input i1F function (terminals 22-23):

NB: THE FOLLOWING FUNCTIONALITIES ARE ENABLED ONLY WHEN P4C=NP

nu = Not used: the digital input is disabled.

iNF = Safety digital input of inverter for fan, used when none relay is configured as inverter for fans

ES = Energy saving;

oFF = instrument shut down;

LL = liquid level alarm

SIL = to enable the silence function

EAL = generic external alarm, it doesn't affect the regulation

NOTE: also the following values: "OA1", "OA2", "OA3", "OA4", "OA5", "OA6", "LP1", "LP2", "HP" are present. These values **must not** be used..

iF08 Configurable digital input i2F function (terminals 22-24):

nu = Not used: the digital input is disabled.

iNF = Safety digital input of inverter for fan, used when none relay is configured as inverter for fans

ES = Energy saving;

oFF = instrument shut down;

LL = liquid level alarm

SIL = to enable the silence function

EAL = generic external alarm, it doesn't affect the regulation

NOTE: also the following values: "OA1", "OA2", "OA3", "OA4", "OA5", "OA6", "LP1", "LP2", "HP" are present. These values **must not** be used..

iP01 Safety input for Load 1 polarity (13-14):

oP: the digital input is activated by opening the contact;

CL: the digital input is activated by closing the contact.

iP02 Safety input for Load 2 polarity (13-15):

oP: the digital input is activated by opening the contact;

CL: the digital input is activated by closing the contact.

iP03 Safety input for Load 3 polarity (16-17):

oP: the digital input is activated by opening the contact;

CL: the digital input is activated by closing the contact.

iP04 Safety input for Load 4 polarity (16-18):

oP: the digital input is activated by opening the contact;

CL: the digital input is activated by closing the contact.

iP07 Configurable digital input i1F polarity (22-23):

oP: the digital input is activated by opening the contact;

CL: the digital input is activated by closing the contact.

iP08 Configurable digital input i2F polarity (22-24)

oP: the digital input is activated by opening the contact;

CL: the digital input is activated by closing the contact.

iP09: Polarity of High pressure-switch alarm (terminals 45-46)

oP =HP alarm is signaled without voltage presence

cL = HP alarm is signaled with voltage presence

- iP10: Polarity of Low pressure-switch alarm** (terminals 44-45)
oP =LP alarm is signaled without voltage presence
cL= LP alarm is signaled with voltage presence
- did** **Liquid level alarm, signaling delay:** (enabled only if iF07 or iF08=LL) 0÷255min
- didA** **External alarm, signaling delay:** (enabled only if iF07 or iF08=EAL) 0÷255min
- ALMr** **Manual reset of alarms for compressors and fans.**
no = automatic recover of alarm: regulation restart when the correspondent digital input is disabled; **yES** = manual recover for the alarms of compressors and fans See also par.19.1.2

17.4 Display and Measurement unit

The measurement unit of the parameters referred to temperature or pressure depends on the parameters dEU, CF and PMu.

NOTE: The controller automatically converts values of set points and parameters referred to the pressure/temperature when the dEU parameter is changed. In any case check the value of the parameters referred to temperature and pressure after changing dEU.

- dEU: Selection of the kind of measurement unit: pressure or temperature**
dEU = tMP: the parameters referred to pressure/temperature will be expressed in temperature according to the value of the CF parameter (°C or °F)
dEU = PrS: the parameters referred to pressure/temperature will be expressed in pressure according to the value of the PMU parameter (bar, PSI or KPA)
- CF Measurement unit for temperature:** it is used only with dEU = tMP, and it set the measurement unit for parameters referred to temperature/pressure.
 °C = Celsius degree
 °F = Fahrenheit degree
- PMU Measurement unit for pressure:** it is used only with dEU = PrS, and it set the measurement unit for parameters referred to temperature/pressure.
bar = bar
PSI = PSI
PA = kPA
- rES** **Resolution for °C and bar** (in = integer; dE= decimal point)
- dFE** **Pressure filter enabling:** **YES** = enabled; **no** = not enabled; This filter takes in account the average value of the pressure during the last cycle for the regulation.
- dEU1** **Default visualization for upper display:** **PrS**= Pressure; **tPr**= temperature
- dSP2** **Probe selection for lower display:** **nu** = display switched off - **P1** = Probe 1 - **P2** = Probe 2 - **P3** = Probe 3 - **P4** = Probe 4 - **StC1** = Compressor Set Point - **StC2** = **NOT SET IT** – **SetF** = Fan set point
- dEU2** **Default visualization for lower display:** **tPr**= temperature, **PrS**= Pressure;

17.5 Compressor regulation

- Pbd: Proportional band or neutral zone width** (0.1÷5.0bar/0.5÷30°C or 1÷150PSI/1÷50°F)
 The band (or zone) is symmetrical compared to the target set point, with extremes: set-Pbd/2 ÷ set+Pbd/2. It is used as proportional band for PI algorithm.
 The measurement unit depends on the dEU, CF, PMU par.
- rS** **Proportional band offset:** PI band offset. It permits to move the proportional band of the PI. With **rS=0** the band is between Set-Pbd/2 ÷ Set+Pbd/2;
- inC** **Integration time:** (0 ÷ 999s) PI integration time
- dGSP** **Digital compressor always activated at first:**
no: other compressors if available are allowed to start when the digital compressor is locked by safety timers. This allows the system to satisfy the cooling demand when the digital compressor is unavailable.

yES: the digital compressor is always started as first. If unavailable due to safety timers the regulation will be locked till timers will be over.

- SUt** **Start up time:** The digital scroll valve is energized for the SUt when the compressor starts (0÷3s)
- tdS** **Digital scroll cycle time:** (10÷40s) it sets the cycle time for the digital scroll (DGS) valve modulation.
- PM** **DGS minimum capacity** (10÷PMA with dGty=ScrL; 0÷PMA = dGty=StrM): it sets the minimum capacity allowed to the digital compressor.
If digital SCROLL is used dGt = ScrL the allowed range is 10÷PMA
If digital STREAM is used dGt = StrM the allowed range is 0÷PMA
- PMA ton** **DGS maximum capacity** (PM÷100) it sets the maximum capacity allowed to the DGS
DGS at maximum PMA capacity before starting a new load (0÷255s)
- toF** **DGS at minimum PM capacity before stopping a load** (0÷255s)
- MinP** **Minimum allowed DGS capacity for poor lubrication monitoring** (0÷100%; with 0 function excluded) If the DGS compressor works for the tMin time with a capacity (in percentage) equal or lower than MinP, it is forced to work at 100% for the tMAS time in order to restore the right lubrication.
- tMin** **Maximum DGS functioning time at a capacity lower than MinP, before working at full capacity (PMA)** (1÷255min)
- tMAS** **Time of DGS functioning at maximum capacity (PMA) to restore the right lubrication** (1÷255min)
- ESC** **Energy saving value for compressors:** (-20÷20bar; -50÷50°C) this value is add to the compressor set point.
- onon:** **Minimum time between 2 following switching ON of the same compressor** (0÷255 min).
- oFon:** **Minimum time between the switching off of a compressor and the following switching on.** (0÷255min). *Note: usually onon is greater than oFon.*
- don:** **Time delay between the insertion of two different compressors** (0÷99.5min; res. 10s).
- doF:** **Time delay between switching off of two different compressors** (0÷99.5 min; res. 10s)
- donF:** **Minimum time a stage stays switched ON** (0÷99.5 min; res. 10s)
- MAon** **Maximum time for compressor ON** (0 ÷ 24 h; with 0 this function is disabled.) If a compressor keeps staying on for the MAon time, it's switched off and it can restart after the oFon standard time.
- FdLy:** **“don” delay enabled also for the first call.** If enabled, the triggering of the step is delayed for a “don” value, respect to the call. (**no** = “don” not enabled; **yES**=“don” enabled)
- FdLF** **“doF” delay enabled also for the first switching off.** It enables the “doF” delay between the request of a release and the actual switching off. (**no** = “doF” not enabled; **yES**=“doF” enabled)
- odo:** **Regulation delay on start-up:** (0÷255s) on switching ON the instrument starts working after the time delay imposed in this parameter.
- LSE:** **Minimum set point:** The measurement unit depends on dEU parameter. It sets the minimum value that can be used for the set point, to prevent the end user from setting incorrect values.
- HSE:** **Maximum set point:** The measurement unit depends on dEU parameter. It sets the maximum acceptable value for set point.

17.6 Liquid injection thermostat

- Lit:** **Set point (°C) for cooling injection thermostat** (0 ÷ 150°C) The reference probe is set by LiPr parameter, the thermostat relay is given by the relay set as **oAi = Lin**.
- Lid:** **Differential for cooling injection thermostat** (0.1 ÷ 10.0) The reference probe is set by LiPr parameter

- LiPr** **Probe for cooling injection thermostat:**
nP: function disabled
P3: probe P3 (term. 38-42)
P4: probe P4 (term. 22-23)

17.7 Fans regulation

- Pb** **Proportional band zone width** (0.1÷30.0°C; 1÷50°F; 0.1÷10.0bar, 1÷150PSI; 10÷1000KPA).
NOTE: Set the dEU par. and the target set point for fans before setting this parameter.
 The band is symmetrical compared to the target set point, with extremes: SETF+Pb/2 ÷ SETF -Pb/2. The measurement unit depends on the dEU par.
- ESF** **Energy saving value for fans:** (-20÷20bar; -50÷50°C) this value is add to the fans set point.
- PbES** **Band offset for fan regulation in ES** (-50.0÷50.0°C; -90÷90°F; -20.0÷20.0bar; -300÷300PSI; -2000÷2000KPA). During energy saving
- Fon** **Time delay between the insertion of two different fans** (0÷255sec).
- FoF** **Time delay between switching off of two different compressors** (0÷255 sec)
- LSF** **Minimum set point for fan:** The measurement unit depends on dEU parameter. It sets the minimum value that can be used for the set point, to prevent the end user from setting incorrect values.
- HSF** **Maximum set point for fan:** The measurement unit depends on dEU parameter. It sets the maximum acceptable value for set point.

17.8 Alarms – compressor section

- PAo:** **Alarm probe exclusion at power on.** it is the period starting from instrument switch on, before an alarm probe is signaled. (0÷255 min). During this time if the pressure is out of range all the compressor are switched on.
- LAL:** **Low pressure (temperature) alarm – compressor section:** The measurement unit depends on dEU parameter: (PA04 ÷ HAL bar; -50.0÷HAL °C; PA04÷HAL PSI; -58÷HAL °F) It's **independent** from the set point. When the value **LAL** is reached the A03C alarm is enabled, (possibly after the **tAo** delay time).
- HAL:** **High pressure (temperature) alarm– compressor section:** The measurement unit depends on dEU parameter: (LAL ÷ PA20 bar; LAL÷150.0 °C; LAL÷PA20 PSI; LAL÷302 °F). It's **independent** from the set point. When the value **HAL** is reached the A04C alarm is enabled, (possibly after the **tAo** delay time).
- tAo:** **Low and High pressure (temperature) alarms delay– compressor section:** (0÷255 min) time interval between the detection of a pressure (temperature) alarm condition and alarm signaling.
- ELP** **Electronic pressure switch threshold:** (-50°C÷STC1; -58°F÷STC1; PA04÷STC1); Pressure / Temperature value at which all the compressors are switched off. It has to be set some degrees above the mechanical low pressure switch value, in order to prevent mechanical low pressure activation.
- SEr:** **Service request:** (1÷999 hours, res. 10h; 0 = alarm excluded) number of running hours after that the "A14" maintenance call is generated.
- PEn:** **Low pressure-switch intervention numbers:** (0÷15). If the low pressure-switch is enabled **PEn** times in the **PEI** interval, the controller is locked. **Only the manually unlocking is possible.** See also the alarms table at paragraph 19. Every time the pressure-switch is enabled all the compressor are turned off.
- PEI:** **Pressure-switch interventions time** (0÷15 min) Interval, linked to the **Pen** parameter, for counting interventions of the low pressure-switch..
- SPr:** **number of steps engaged with faulty probe.** (0÷6).

17.9 Alarms – DLT section

- dtL** **Digital compressor discharge line temperature alarm** (alarm referred to the probe set in the par. dtLi) (0÷180°C; 32÷356°F). If the probe 3 is used to detect the temperature of the discharge line of the DGS compressor, the compressor is switched off when this threshold is reached.
- dLd** **Digital compressor discharge line temperature alarm delay** (alarm always referred to P3 probe) (0÷15min)
- dLH** **Digital compressor discharge line alarm reset differential** (alarm always referred to P3 probe) (0.1÷25.5°C; 1÷50°F)
- dtLi** **Probe selection for the discharge line temperature monitoring:**
nP: function disabled
P3: probe P3 (term. 38-42)
P4: probe P4 (term. 22-23)
- dtLP** **Digital Compressor Capacity percentage in case of discharge line temperature alarm** (0÷80%; with 0 the compressor is stopped)


17.10 Alarms – fans section

- LAF:** **Low pressure alarm – fans section:** The measurement unit depends on the dEU parameter: (FA04 ÷ HAF bar; -50.0÷HAF °C; FA04÷HAF PSI; -58÷HAF °F) It's independent from the set point. When the value LAF is reached the LA2 alarm is enabled, (possibly after the **AFd** delay time).
- HAF:** **High pressure alarm – fans section:** The measurement unit depends on the dEU parameter: (LAF÷FA20 bar; LAF÷150.0 °C; LAF÷FA20 PSI; LAF÷302 °F). It's independent from the set point. When the value HAF is reached the HA2 alarm is enabled, (possibly after the **AFd** delay time).
- AFd:** **Low and High pressure alarms delay – fans section:** (0÷255 min) time interval between the detection of a pressure alarm condition in the fans section and alarm signaling.
- HFC** **Compressors off with high pressure (temperature) alarm for fans**
no = compressors are not influenced by this alarm
yes = compressors are turned off in case of high pressure (temperature) alarm of fans
- HFdP** **Digital Compressor Capacity percentage in case of high condenser pressure (temperature) alarm** (0÷80%; with 0 the compressor is stopped)
- dHF** **Interval between 2 compressors turning off in case of high pressure (temperature) alarm for fans** (0 ÷ 255 sec)
- PnF:** **High pressure-switch intervention numbers – fans section:** (0÷15 with 0 the manually unlocking is disabled) if the high pressure-switch is enabled PnF times in the PiF interval, the controller is locked. **It can be unlocked only manually.** See paragraph 19. Every time the pressure-switch is enabled all the compressors are turned off and all the fans are turned on.
- PiF:** **Pressure-switch interventions time – fans section** (1÷15 min) Interval, linked to the PEn parameter, for counting interventions of the high pressure-switch..
- FPr** **Number of fans engaged with faulty probe.** (0÷#fans).

17.11 Dynamic set point for fan

- dSEP** **Dynamic set point reference probe**
nP: no probe; function disabled
P3: probe P3 (term. 38-42)
P4: probe P4 (term. 22-23)
- dSES** **External temperature value to start dynamic regulation** (-50÷150°C; -58÷302 °F)
- dSEb** **External band width for dynamic set point** (-50.0 ÷ 50.0°C; -90 ÷ 90°F)

dSEd Set point differential for dynamic set point: (-20.0÷20.0°C; -50.0÷50.0PSI; -300÷300°F)

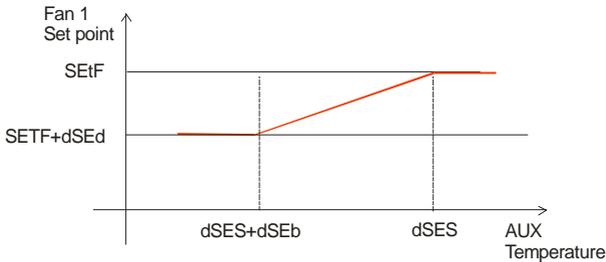

17.12 Analog output (optional)

AoC Analog output setting

tEn = 0÷10V output

cUr = 4-20mA output

AOF Analog output function

nu = analog output disabled;

Inc1= To drive inverter for suction frequency compressor ;

Inc2 = not set it

inF= to drive ECI fan or inverter for fan

AOM Minimum value for analog output (4 ÷ 20mA)

AOt Time of analog output at max after the start (0÷15s)

MPM Maximum % variation per minute: (nu; 1÷100)

nu = not used: function disabled

1÷100 = it sets the maximum percentage variation per minute of the analog output.

SAO Percentage of analog output in case of probe failure: (0 ÷ 100%)

AOH Maximum analog output percentage when silence mode function is enabled (0÷100)

17.13 Other

tbA Alarm relay silencing: by pushing one of the keypad buttons. **no**= alarm relay stays on; **yES**= alarm relay is switched off by pushing any keys.

OAP Alarm relay output polarity: **cL**=closed when activated; **oP**= opened when activated

oFF Switching ON/OFF enabling from keyboard: (**no** = disabled; **yES**= enabled) It permits the switching ON/OFF of the instrument by pressing the SET key for more than 4s.

bUr Buzzer enabling

no = the buzzer is not used in case of alarm

yES = buzzer is used in case of alarm

Adr: **Serial address** (1 –247) It is used in monitoring system.

rEL Software release for internal use.

Ptb Parameter table code: readable only.

Pr2 Access to Pr2 parameter level


18. Type of regulation

18.1 DIGITAL COMPRESSOR REGULATION


18.1.1 *Digital scroll: main parameters set up*

EG: Plant with 2 compressors (one of them digital) e 2 fans default configuration with PP11, PP30 pressure transducers:

oA1 = dGS	oA2 = CPr,	oA3 = FAn,	oA4 = FAn,	dGty = SCrL
-----------	------------	------------	------------	-------------

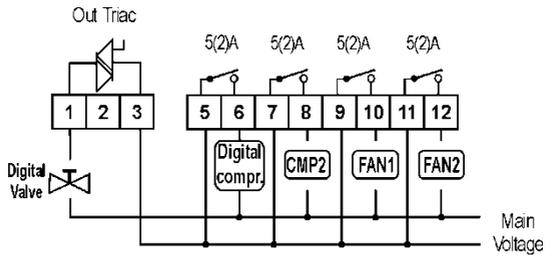

The pressure is adjusted by a PI regulation.

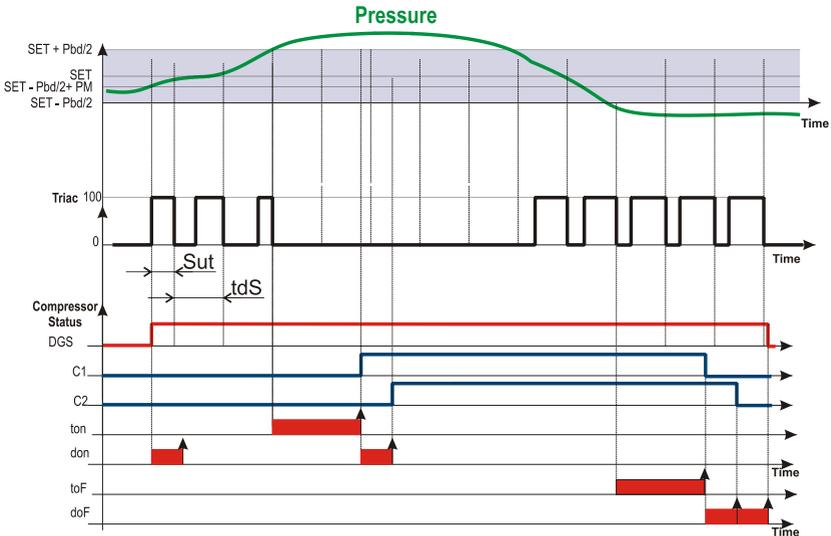

18.1.2 Regulation Start: increasing capacity

- The regulation starts when the suction pressure (temperature) increases and reaches the value $\text{SET-Pbd}/2+(\text{Pbd}\cdot\text{PM})/100$. At first, if available, the digital compressor is powered, and it is modulated in PWM mode.
NOTE: At start up the valve is energized for SUt seconds.
- Within the adjustment range $(\text{SET-Pbd}/2 \div \text{SET}+\text{Pbd}/2)$ the digital scroll compressor is activated in PWM mode in accordance with the value of the control variable. (NOTE: When the TRIAC is on the compressor is discharged; when the TRIAC is off the compressor is operative).
- When the pressure is greater than $[\text{SET} + \text{Pbd}/2]$ and the TRIAC output is already at maximum, another compressor is started after the "ton" delay time.
- Then, if additional capacity is required (pressure higher than $[\text{SET} + \text{Pbd}/2]$ another compressor starts after the "don" time.

NOTE: If the pressure exceeds the value $\text{SET}+\text{Pbd}/2$ and the DGS compressor is not available (blocked by onon, oFon, safety digital input), another compressor is started (if available) in order to meet the adjustment request.


18.1.3 Decreasing capacity and regulation stop

- When the pressure is lower than $[\text{SET} - \text{Pbd}/2]$, the DGS compressor is still modulated to minimum capacity for the toF time
- At the end of the toF time the load with more working hours is shut down. If the load must stay on because the donF time is not over yet, the next load is considered, and so on until a load that can be shut down is found or becomes available.
- This procedure continues with all active loads, with the shutdowns spaced out by the doF time setting.
- When only the DGS remains on, at the end of the doF time the DGS is shut down too.


18.1.4 Digital Stream: Main parameters set up

EG: Plant with 2 compressors Stream 6D and 2 fans default configuration with PP11, PP30 pressure transducers:

oA1 = dGS	oA2 = 6dG	oA3 = FAn,	oA4 = FAn,	dGty = StrM
-----------	-----------	------------	------------	-------------

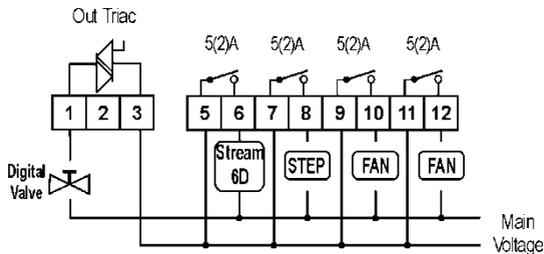


The pressure is adjusted by a PI regulation, following the same logic of the digital scroll see previous paragraphs: 18.1.2 and 18.1.3

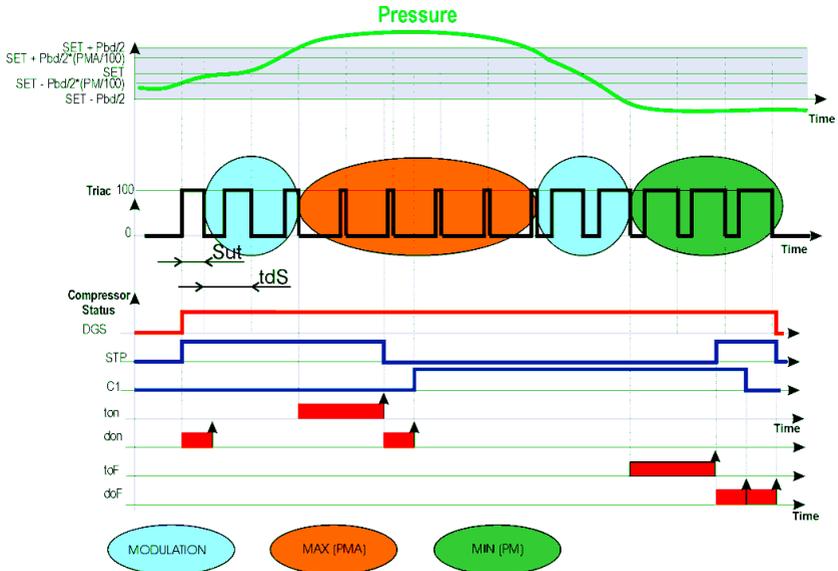

18.1.5 Limitation of digital compressor capacity by parameters PM and PMA

The capacity of the DGS compressor can be limited by the PM and PMA parameters, as shown in the following diagram.

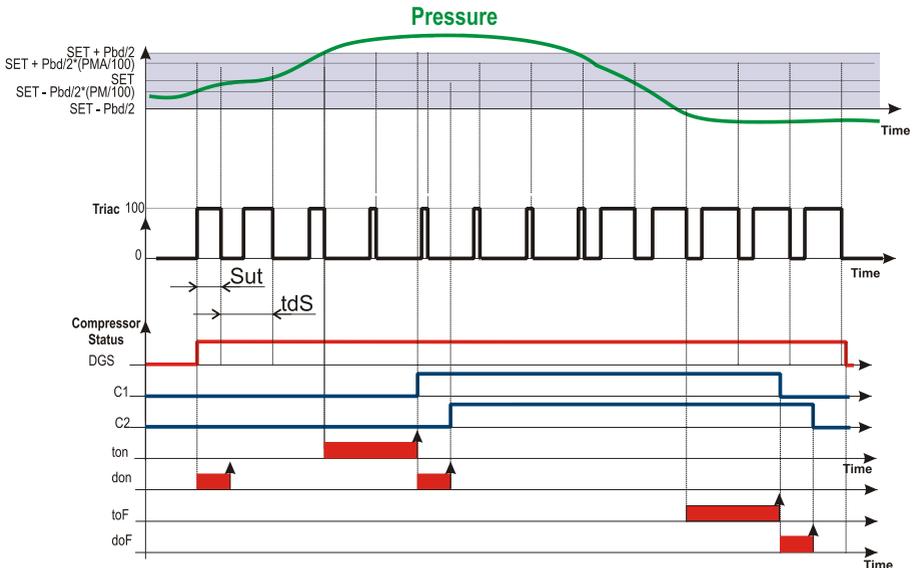

The capacity of the DGS compressor is limited by the PM and PMA parameters, where

PM: in percentage, it sets the minimum capacity of the DGS activation during a period tdS . For instance with $tdS = 20s$ and $PM = 20$, the minimum activation of the DGS is 4s.

NOTE

For digital scroll ($dGty = SCrL$) the minimum allowed value of **PM is 10**

For digital stream ($dGty = StrM$) the minimum allowed value of **PM is 0**

NOTE: for a proper functioning of the DGS, it's recommend a minimum activation time of 2s.

PMA: it limits the percentage of the DGS activation during a tdS period according to the formula: $((Pbd * PMA) / 100) * tdS$.

18.2 Proportional Band regulation - only for fans

The fan regulation band **Pb** is divided by the number of fans:

The numbers of fans switched ON is proportional to the value of the input signal: when this distances itself from the target set point and enters the various bands, the compressors are switched ON, to be then turned OFF when the signal brings near the set point.


In this way if the pressure is greater than regulation band, all the fans are on, if the pressure (temperature) is lower than the regulation band all the fans are off. Naturally also for this regulations all the delays (Fon and FoF) are valid.

Regulation according to the running hours

The algorithm switch on and off the loads according to the running hours of each load. In this way the running hours are balanced.

Example

4 Fans: oA2 = FAn; oA3 = FAn; oA4 = FAn; oA6 = FAn;
rot = yES rotation enabled

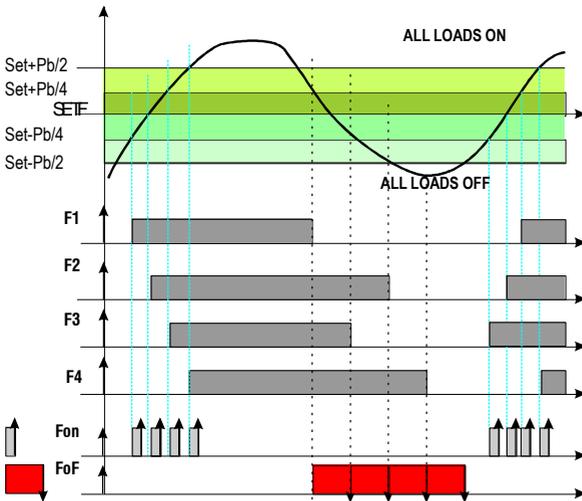

18.3 Condenser with Inverter or Eci Fans–Analog Output Setting

This configuration is used when all fans of the condensing group are ECI fans or driven by one inverter or a chopped phase driver.


The capacity used by the inverter is proportional to the delivery pressure value inside the regulation band ($SETF-Pb/2 \div SETF+Pb/2$).

18.3.1 Condenser fan configurations and Parameters

Parameter	Description	Action
oA(i) = inF	Set 1 relay for inverter	One relay is used to enable the action of the inverter.
AoC = tEn	Analog output setting	Set the output as 0-10V
AoF = InF	Analog output function	Set the output to drive ECI or inverter fan
AOM = 0	Minimum value for analog output	The minimum voltage is 0V. NOTE: verify on the inverter of ECI fan of chopped phase driver that with this input a proper output is supplied to the fan.
AOt = 5	Time of analog output at max after the start	To start the fan the controller supplies 10V output for 5s, then starts standard regulation
MPM = 100	Maximum % variation per minute	The analog output takes 1 min to move from the min to the maximum

18.3.2 How to set it

Parameters involved: **oA(i) = inF**; **AoC = tEn**, **AoF = InF**, **Aot = 0**, **AOM = 30**, **MPM = 100**

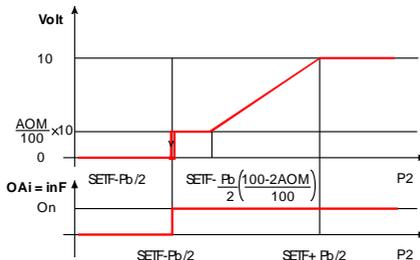

- If required, set a relay to drive the invert (is used to signal to the inverter to start and stop the regulation), by setting: **oA(i) = inF** inverter for fans
- Set the kind of signal of the analog output current (4-20ma) or voltage (0-10V) by the **Analog output setting** parameter "**AoC**": **tEn** = 0÷10V output; **cUr** = 4-20mA output
- Set the function of the analog output: **AoF = InF**
- Set the time of the analog output at max after start up EI: Aot = 3s**
- Set the max % variation per min (MP)**
- At last set also the percentage of analog output in case of probe failure: (0 ÷ 100%)**SAO**

19. Alarm list

Usually alarm conditions are signaled by means of:

1. Activation of alarm output 0-12V
2. Buzzer activation
3. Message on proper display
4. Log of alarm: code and duration.

The table at paragraph 19.3

19.1 Types of alarms and signaling managed

19.1.1 A12: Configuration alarm

The following configuration parameters are checked after each modification:

OA2+ OA6	Outputs 2- 6 configuration
P2P	Second probe presence
AOP	Probe for analog output

When these parameters are set in wrong way an alarm message is generated: the label **A12** is shown on the upper display, while the lower display the following messages are shown:

Mess.	Errata	Corrige
Too Many dGS output	More than one oAi has been set as dGs (digital scroll)	<ul style="list-style-type: none"> Check the oAi parameters and set them different from dGS.
Too Many dGSSt output	One oAi has been set as dGst (triac for digital scroll)	<ul style="list-style-type: none"> Check the oAi parameters and set them different from dGSSt.
Too Many 6dG output	More than one oAi has been set as 6dG (blocked suction valve for digital stream 6D)	<ul style="list-style-type: none"> Check the oAi parameters and set them different from 6dG.
6dG bEForE dGS ConFIG Error	oAi configured as 6dG before the dGS	<ul style="list-style-type: none"> Check the oAi parameters and set 6dG after dGS.
dGSSt OutPut Error	One oAi has been set as dGst (triac for digital scroll)	<ul style="list-style-type: none"> Check the oAi parameters and set them different from dGSSt.
dGS not PrESent	One oAi has been set as dGs (digital scroll)	<ul style="list-style-type: none"> Check the oAi parameters and set them different from dGS.
StEP ConFIG Error	Load (step) configuration error	<ul style="list-style-type: none"> A relay oA(i) has been set as compressor without a previous relay oA(i-1) has been set as compressor. EI oA1 = StP
no P3 ProbE PrESent	The P3 probe is requested for a function, but it's not present	<ul style="list-style-type: none"> Check the parameters P3C
no LoAdS For rEGuLAtion	None oA(i) is set as compressors or fans	<ul style="list-style-type: none"> Check the setting of oA2, oA3, oA4, oA6 parameters
AOP2	P2 probe not available for the 4÷20mA output	<ul style="list-style-type: none"> P2 probe not available P2P =no. Enable the probe setting: P2P =yES The second probe P2 is used to control the temperature of the engine of screw compressors. Check CtyP and set it different from Scr.
no FAn ProbE	P2 probe not available for fan regulation	<ul style="list-style-type: none"> P2 probe not available P2P =no. Enable the probe setting: P2P =yES The second probe P2 is used to control the temperature of the engine of screw compressors. Check CtyP and set it different from Scr.

Mess.	Errata	Corrige
too MANy InC1	More than one oAi has been set as inC1 (inverter for suction 1)	<ul style="list-style-type: none"> Check the oAi parameters and set only 1 as "inC1".
No AnALoGuE out For InC1	None analogue output has been set as "inC1"	<ul style="list-style-type: none"> Check AoF and 2AoF and set one of them as "inC1"
too MANy InF	More than one oAi has been set as inF (inverter for fan)	<ul style="list-style-type: none"> Check the oAi parameters and set only 1 as "inF".
No AnALoGuE out For InF	None analogue output has been set as "inF"	<ul style="list-style-type: none"> Check AoF and 2AoF and set one of them as "inF"
CPr Circuit conFiG Error	The kind of outputs are not compatible with the 2 suction circuits	<ul style="list-style-type: none"> Check parameters oA(i) , CtyP and set CtyP different from Scr.
AO1 And AO2 SAME Function	AoF and 2AoF have the same setting	<ul style="list-style-type: none"> Set AoF and 2AoF properly.

19.1.2 E01L, Electronic Pressure switch alarm, suction section

Parameters

ELP: Electronic pressure switch threshold: (-50°C÷SETC; -58°F÷SETC; PA04÷SETC); Pressure / Temperature value at which all the compressors are switched off. It has to be set some degrees above the mechanical low pressure switch value, in order to prevent mechanical low pressure activation.

Actions

Electronic low pressure: every time the suction temperature/pressure is less than ELP value all the compressors are switched off. The instrument restarts the standard operating mode when pressure/ temperature increases.

19.1.3 E0H1, E0L1 Pressure switch alarm, suction and condensing sections

Terminals

WARNING: THESE TERMINALS REQUIRE A MAIN OF VOLTAGE CONNECTION

Low pressure switch input: 44-45, high pressure switch input: **[45-46]**.

Parameters

iP10: Low pressure switch polarity: It establishes if the input is activated by giving (iP10=cL) or by removing (iP10=oP) main voltage to the terminals.

iP09: High pressure switch polarity: It establishes if the input is by giving (iP09=cL) or by removing (iP09=oP) main voltage to the terminals.

Actions

Low pressure: every time the inputs are activated all the compressors are switched off. The instrument restart the standard operating mode when the input is disabled. If there are PEN activation in the PEi time, only manual resetting is allowed, by pressing the **DOWN** key for 3s or by turning off and on the instrument.

High pressure: every time the inputs are activated all the compressors are switched off and fans are switched on. The instrument restart the standard operating mode when the input is disabled. If there are PnF activation in the PiF time, only manual resetting is allowed, by pressing the **DOWN** key for 3s or by turning off and on the instrument.

19.1.4 EA1÷EA4: Compressors and fans safeties alarm.

Terminals

WARNING: THESE TERMINALS REQUIRE A FREE OF VOLTAGE CONNECTION.

The terminals (from 13 TO 18) really used depends on the number of loads. The protections regarding the compressors and fans are connected to these inputs. If one of these protections is enabling (E.I. for lack of oil or overheating, etc,) the corresponding load is turn off.

Parameters

iP01, iP02, iP03, iP04: establish if the input is activated by closing (cL) or by opening (=oP) the terminals.

Actions

Every time one input is activated the corresponding output is turned off.

Recovery

Recovery depends on **ALMr** parameter:

With **ALMr = no** The instrument restart the standard operating mode when the input is disabled.

With **ALMr = yES** manual recover for the alarms of compressors and fans. Push the **DOWN** key for 3s.

19.1.5 P1, P2; P3,P4: probe failure alarm

It is generated by failure in the probe P1, P2 , P3 or P4.

In case of **P1** fault, number of steps engaged depends on the **SPr** parameter

In case of **P2** fault, number of fans engaged depends on the **FPr** parameter

If the P3 or P4 probes are used for dynamic set point

The function is disabled and only the standard set point is used.

Recovery

Automatic as soon as probe restarts working.

19.1.6 CIHA, CILA, F-HA, F-LA High and low pressure (temperature) alarms for compressors or fans

This alarm signals that the pressure (temperature) is out of limits established by parameters LAL and HAL for compressors and LAF –HAF for fans.

The **tAo** and **AFd** parameters set the delay between alarm condition and alarm signaling.

Action

The alarm is signaled with standard action. The outputs are unchanged.

19.2 Buzzer muting

Press any buttons to silence the buzzer during an alarm condition.

Hold pressed for more than 3 seconds switch off the alarm relay during an alarm condition

19.3 Alarm conditions – summary table

Code	Description	Cause	Action	Reset
E01L	Low electronic pressure-switch alarm	Pressure/temperature less than ELP value	All compressors are turned off. Fans unchanged.	Automatically when the pressure/temperature increases more than ELP value

Code	Description	Cause	Action	Reset
E0L1	Low pressure-switch alarm	Low pressure switch input enabled	All compressors are turned off. Fans unchanged.	Automatically (if the number of activation are less than PE _n in the PE _i time) when the input is disable. - The compressors restarts working according to the working algorithm. Manually (if PE _n activation happened in the PE _i time) When the input is disable: a. hold pressed the Restart(DOWN) key for 3s or b. turn off and on the instrument.. - The compressors restarts working according to the working algorithm.
E0H	High pressure switch alarm	High pressure switch input enabled	- All compressor s are turned off. - All fans are turned on.	Automatically (if the number of activation are less than PE _n in the PE _i time) when the input is disable. - Compressors and fans restart working according to the working algorithm. Manually (if PE _n activation happened in the PE _i time) When the input is disable: - hold pressed the Restart(DOWN) key for 3s or - turn off and on the instrument. Compressors and fans restarts working according to the working algorithm.
P1	P1 probe failure alarm	Probe failure or out of range	- The compressors are activated according to the SPr or PoPr parameters.	Automatically as soon as the probe restarts working.
P2	P2 probe failure alarm	Probe failure or out of range	- The fans are activated according to the FPr parameters.	Automatically as soon as the probe restarts working.
P3	P3 probe failure alarm	Probe 3 failure or out of range	- The functions related to the third probe are disabled.	Automatically as soon as the probe restarts working.
P4	P4 probe failure alarm	Probe 4 failure or out of range	- The functions related to the fourth probe are disabled.	Automatically as soon as the probe restarts working.
EA1 EA2 EA3 EA4	Load safeties alarm	Safeties compressor/fan input activation. NOTE: with step compressors 1 input for each compressor has to be used.	- the correspondin g load is turned off. (with step compressors all relays referred to the input are disabled).	Recovery depends on ALMr parameter: With ALMr = no The instrument restart the standard operating mode when the input is disabled. With ALMr = yES manual recover for the alarms of compressors and fans. Push the DOWN key for 3s.

Code	Description	Cause	Action	Reset
C1-LA	Minimum pressure (temperature) alarm compressors section	Suction pressure or temperature lower than LAL value	signaling only	Automatically: as soon as the pressure or temperature reaches the (LAL+ differential) value. (differential = 0.3bar or 1°C)
F-LA	Minimum pressure (temperature) alarm fans section	Condensing pressure or temperature lower than LAF value	signaling only	Automatically: as soon as the pressure or temperature reaches the (LAF+ differential) value. (differential = 0.3bar or 1°C)
C1-HA	Maximum pressure (temperature) alarm compressors section	Suction pressure or temperature higher than HAL value	signaling only	Automatically: as soon as the pressure or temperature reaches the (HAL - differential) value. (differential = 0.3bar or 1°C)
F-HA	Maximum pressure (temperature) alarm fans section	Condensing pressure or temperature higher than HAF value	Depends on the parameter HFC	Automatically: as soon as the pressure or temperature reaches the (HAF - differential) value. (differential = 0.3bar or 1°C)
A5	Liquid level alarm	Input enabled	signaling only	Automatically as soon as the input is disabled
A12	Configuration alarms	See par. 18.1	–	
A14	Load maintenance alarm	A load has worked for the hour set in the SER parameter	- signaling only	Manually: reset the running hour of the compressor (see par.0 Running hours of loads)
dtL	Discharge Line Temperature	Pb3 or Pb4 Temperature Higher than dtL for the dLd time delay	Digital Scroll switched off reduced capacity	Automatically as soon as the temperature becomes lower than dtL.
EA	External alarm	The configurable dig. Input set as EA is activated	signaling only	Automatically as soon as the input is disabled
Inf	Inverter fan alarm	The configurable dig. Input set as EA is activated	The analog out set as INF is switched off	Automatically as soon as the input is disabled

20. Technical features

Housing: Self extinguishing ABS.

Case: 4 DIN modules 70x135mm with male and female connectors; depth 60mm.

Mounting: "CX" format panel mounting in a 29x71 mm panel cut-out

Mounting: DIN RAIL mounted in an omega (3) din rail.

Protection: IP20.

Connections: pluggable screw terminal block $\leq 2.5 \text{ mm}^2$ wiring.

Power supply: 230Vac $\pm 10\%$. 50-60Hz, or 115Vac $\pm 10\%$. 50-60Hz or 24Vac $\pm 10\%$. 50-60Hz

Power absorption: 6VA max.

Display: 4 digits red led and 4 digit orange led.

Inputs: 4 NTC probes, or 4 PTC probes or 2 4 \div 20mA or 0.5 \div 4.5Vdc transducer.

Digital inputs: up to 8 free voltage, 2 inputs main voltage

Relay outputs: 4 relay SPST 5(3)A, 250Vac

Triac output: 0,5A 230V max

Analogue output: 2 x 4 \div 20mA or 0 \div 10V,

Serial output : RS485 standard **Communication protocol:** ModBus – RTU

Data storing: on the non-volatile memory (EEPROM).

Kind of action: 1B; **Pollution grade:** normal; **Software class:** A.

Operating temperature: -10 \div 60 °C.; **Storage temperature:** -25 \div 80 °C.

Relative humidity: 20-85% (no condensing)

Measuring range: NTC probe: -40 \div 110°C.

Resolution: 0,1 °C; 1°F; 0.1bar; 1 PSI;

Accuracy (ambient temp. 25°C): $\pm 0,7 \text{ °C} \pm 1 \text{ digit}$

21. Parameters – Default values

Label	Valori	Menù	Descrizione Parametri	Limiti
StC1	-10.0	Pr1	Set point for compressors	LSE+HSE
SEtF	35.0	Pr1	Set point for fans	LSF+HSF
OA1	dGS	Pr2	Load 1 configuration	nu - CPr1 - CPr2 - StP - dGS - 6dG - dGSt - InC1 - InC2 - FAn - InF - LIn - ALr
OA2	CPr	Pr2	Load 2 configuration	nu - CPr1 - CPr2 - StP - dGS - 6dG - dGSt - InC1 - InC2 - FAn - InF - LIn - ALr
OA3	FAn	Pr2	Load 3 configuration	nu - CPr1 - CPr2 - StP - dGS - 6dG - dGSt - InC1 - InC2 - FAn - InF - LIn - ALr
OA4	FAn	Pr2	Load 4 configuration	nu - CPr1 - CPr2 - StP - dGS - 6dG - dGSt - InC1 - InC2 - FAn - InF - LIn - ALr
dGty	SCRl	Pr2	Kind of digital compressor : Scroll or Stream	SCRl - StrM
StP	oP	Pr2	Valve output polarity	OP - CL
FtyP	404	Pr2	Refrigerant gas type	r22 - 404 - 407A - 407C - 407F - 410 - 507 - 134 - CO2
Sty	yES	Pr2	Compressor Sequence type	no - yES
rot	yES	Pr2	Fan Sequence type	no - yES
P1C	Cur	Pr2	P1 probe setting (4/20mA, 0-5V, ntc)	nP - Cur - tEn - ntc
PA04	-0.5	Pr2	4mA or 0.5V readout for P1 probe	(-1.0 \div PA20)BAR; (-15 \div PA20)PSI; (-100 \div PA20)KPA
PA20	11.0	Pr2	20mA or 4.5V readout for P1 probe	(PA04 \div 51.0)BAR; (PA04 \div 750)PSI; (PA04 \div 5100)KPA
CAL	0.0	Pr2	P1 probe offset	-12.0 \div 12.0(°C); -20 \div 20 (°F); 12.0 \div 12.0 (bar); -200 \div 200 (PSI) -999 \div 999 (kPA)
P2C	Cur	Pr2	P2 probe setting (4/20mA, 0-5V, ntc)	nP - Cur - tEn - ntc
FA04	0.0	Pr2	4mA or 0.5V readout for P2 probe	(-1.0 \div FA20)BAR; (-15 \div FA20)PSI; (-100 \div FA20)KPA
FA20	30.0	Pr2	20mA or 4.5V readout for P2 probe	(FA04 \div 51.0)BAR; (FA04 \div 750)PSI;(FA04 \div 5100)KPA
FCAL	0.0	Pr2	P2 probe offset	-12.0 \div 12.0(°C); -20 \div 20 (°F); 12.0 \div 12.0 (bar); -200 \div 200 (PSI) -999 \div 999 (kPA)
P3C	nP	Pr2	P3 probe setting (4/20mA, 0-5V, ntc)	nP - Cur - tEn - nt10 - nt86
3P04	-0.5	Pr2	4mA or 0.5V readout for P3 probe	(-1.0 \div FA20)BAR; (-15 \div FA20)PSI; (-100 \div

Label	Valori	Menù	Descrizione Parametri	Limiti
				FA20)KPA
3P20	11.0	Pr2	20mA or 4.5V readout for P3 probe	(FA04 ÷ 51.0)BAR; (FA04 ÷ 750)PSI;(FA04 ÷ 5100)KPA
O3	0.0	Pr2	P3 probe offset	-12.0÷12.0(°C); -20÷20 (°F); 12.0÷12.0 (bar); - 200÷200 (PSI) -999÷999 (kPA)
P4C	nP	Pr2	P4 probe setting (NTC 10K, NTC 86K)	nP - nt10 - nt86
O4	0.0	Pr2	P4 probe offset	-12.0÷12.0(°C); -20÷20 (°F)
FPb	P2	Pr2	Probe setting for fan	nP - P1 - P2 - P3
iF07	ES	Pr2	Configurable digital input i1F function (terminals 22-23)	nu - OA1- OA2 - OA3 - OA4 - OA5 - OA6 - InF - LP1 - LP2 - HP - ES - OFF - LL - SIL - EAL
iF08	LL	Pr2	Configurable digital input i2F function (terminals 22-24):	nu - OA1- OA2 - OA3 - OA4 - OA5 - OA6 - InF - LP1 - LP2 - HP - ES - OFF - LL - SIL - EAL
iP01	cL	Pr2	Safety input for Load 1 polarity (13-14):	OP - CL
iP02	cL	Pr2	Safety input for Load 2 polarity (13-15):	OP - CL
iP03	cL	Pr2	Safety input for Load 3 polarity (16-17):	OP - CL
iP04	cL	Pr2	Safety input for Load 4 polarity (16-18):	OP - CL
iP07	cL	Pr2	Configurable digital input i1F polarity (22-23):	OP - CL
iP08	cL	Pr2	Configurable digital input i2F polarity (22-24)	OP - CL
iP09	cL	Pr2	Polarity of High pressure-switch alarm (terminals 45-46)	OP - CL
iP10	cL	Pr2	Polarity of Low pressure-switch alarm (terminals 44-45)	OP - CL
did	20	Pr2	Liquid level alarm, signaling delay	0 ÷ 255 (min.)
didA	20	Pr2	External alarm, signaling delay:	0 ÷ 255 (min.)
ALMr	no	Pr2	Manual reset for compressor/fan alarms	no - yES
dEU	tPr	Pr2	Displaying measurement unit: pressure or temperature	tMP - PrS
CF	°C	Pr2	Measurement unit for temperature	°C - °F
PMU	Bar	Pr2	Measurement unit for pressure	BAR - PSI - PA
rES	dE	Pr2	Resolution for display and parameters	in - dE
dFE	no	Pr2	Pressure filter enabling	no - yES
dEU1	tPr	Pr2	Upper display: pressure or temperature selection	tMP - PrS
dSP2	P2	Pr2	Lower display default visualization	nu - P1 - P2 - P3 - P4 - StC1 - StC2 - SEIF
dEU2	tPr	Pr2	Lower display: pressure or temperature selection	tMP - PrS
Pbd	5.0	Pr2	Proportional band for compressors regulation	0.1÷30.0(°C); 1÷50 (°F); 0.1÷10.0(BAR); 1÷150(PSI) 10÷1000(KPA)
rS	0.0	Pr2	Band offset	-12.0÷12.0(°C) -20÷20(°F) - 12.0÷12.0(BAR) -200÷ 200(PSI) -999÷999(KPA)
inC	500	Pr2	Integral time	0 ÷ 999 sec
dGSP	no	Pr2	Digital compressor always activated as first compressor	no - yES
SUt	2	Pr2	Digital input valve on at start up	0÷3s
tdS	15	Pr2	Cycle time for digital compressor	10÷40s
PM	30	Pr2	Minimum capacity for digital compressor	10÷PMA(dGty=ScrL) 0÷PMA(dGty=StrM)
PMA	100	Pr2	Maximum capacity for digital compressor	PM÷100
ton	60	Pr2	Time with digital compr. at PMA value before starting a load	0÷255s
toF	5	Pr2	Time with digital compr. at PM before turning off a load	0÷255s
MinP	0	Pr2	Minimum capacity threshold to start the	0÷100

Label	Valori	Menù	Descrizione Parametri	Limiti
			safety lubrication function	
tMin	180	Pr2	Max time at MinP to start the safety lubrication function	1÷255min
tMAS	3	Pr2	Time at PMA for digital compressor to restore the right lubrication	1÷255min
ESC	0.0	Pr1	Energy saving for compressors regulation	-50.0÷50.0(°C) -90÷90(°F) - 20.0÷20.0(BAR) - - 300÷300(Psi) -2000÷2000(KPA)
OnOn	5	Pr2	Minimum delay between 2 switching on of the same compressor	0 ÷ 255 (min.)
OFOn	1	Pr2	Delay between the switching off and on of the same compressor	0 ÷ 255 (min.)
don	01:00	Pr2	Time delay between the insertion of two different loads	0 ÷ 99.5 (min.10sec)
doF	00:10	Pr2	Time delay between switching off of two different compressors	0 ÷ 99.5 (min.10sec)
donF	00:30	Pr2	Minimum time a stage stays ON	0 ÷ 99.5 (min.10sec)
MAon	0	Pr2	Maximum time a stage stays switched ON	0 ÷ 24 (hour)
FdLy	no	Pr2	'don' delay enabled also for the first request	no - yES
FdLF	no	Pr2	'doF' delay enabled also for the first switching off	no - yES
odo	20	Pr2	Regulation delay at power on	0 ÷ 255 (sec.)
LSE	-40.0	Pr2	Minimum set point (compressors)	-50.0÷HSE(°C) -58.0÷HSE(°F) PA04÷HSE(BAR,PSI,KPA)
HSE	10.0	Pr2	Maximum set point (compressors)	LSE÷150.0(°C) LSE÷302(°F) LSE÷PA20(BAR , PSI , KPA)
Lit	90.0	Pr2	Set point for liquid injection	0.0 ÷ 180.0(°C) 32 ÷ 356(°F)
Lid	10.0	Pr2	Differential for liquid injection	0.1 ÷ 25.5(°C) 1 ÷ 50(°F)
LiPr	nP	Pr2	Probe selection for liquid injection	nP - P3 - P4
Pb	5.0	Pr2	Proportional band for fan regulation	0.1÷30.0(°C) 1÷50 (°F) 0.1÷10.0(BAR) 1÷150(Psi) 10÷1000(KPA)
ESF	0.0	Pr2	Energy saving differential for fan regulation	-50.0÷50.0(°C) -90÷90(°F) - 20.0÷20.0(BAR) -300÷300(Psi) - 2000÷2000(KPA)
PbES	0.0	Pr2	Band offset for fan regulation in ES	-50.0÷50.0(°C) -90÷90(°F) - 20.0÷20.0(BAR) - - 300÷300(Psi) -2000÷2000(KPA)
Fon	30	Pr2	Time delay between the insertion of two different fan	0 ÷ 255 (sec)
FoF	15	Pr2	Time delay between switching off of two different fan	0 ÷ 255 (sec)
LSF	10.0	Pr2	Minimum set point (fan)	-50.0÷HSF(°C) -58.0÷HSF(°F) FA04(FPb)÷HSF(BAR , PSI , KPA)
HSF	50.0	Pr2	Maximum set point (fan)	LSF÷150.0(°C) LSF÷302(°F) LSF÷FA20 (BAR , PSI , KPA)
PAO	30	Pr2	Alarm probe delay at power on	0 ÷ 255 (min.)
LAL	-40.0	Pr1	Pressure alarm set low limit (compressors)	-50.0÷HAL(°C); -58÷HAL(°F); PA04÷HAL(BAR , PSI , KPA)
HAL	10.0	Pr1	Pressure alarm set high limit (compressors)	LAL÷150.0(°C); LAL÷302(°F); LAL÷PA20(BAR , PSI , KPA)
tAo	15	Pr1	Pressure/temperature alarm delay (compressors)	0 ÷ 255 (min.)
ELP	-45.0	Pr2	Electronic pressure switch threshold	-50.0÷STC1(°C) -58÷STC1(°F) PA04÷STC1(BAR , PSI , KPA)
SEr	999	Pr2	Working hour alarm set (tenth of ours)	1 ÷ 999 (0= disabled) (10 hour)
PEn	5	Pr2	Pressure switch maximum activations	0 ÷ 15

Label	Valori	Menù	Descrizione Parametri	Limiti
PEI	60	Pr2	Pressure switch activations time	0 ÷ 255 (min.)
SPr	1	Pr2	Compressors ON with faulty probe	0 ÷ 6
dtL	110	Pr2	DLT high temperature alarm threshold	0÷180°C 32÷356°F
dLd	5	Pr2	DLT high temperature alarm delay	0÷15min
dLH	15.0	Pr2	DLT high temperature alarm differential for recovery	0.1÷25.5°C 1÷50°F
dtLi	nP	Pr2	Probe selection for DLT control	nP - P3 - P4
dtLP	50	Pr2	Digital Compressor Capacity percentage in case of discharge line temperature alarm	0÷80(%)
LAF	0.0	Pr1	Low pressure alarm set (fan)	-50.0÷HAF(°C); -58÷HAF(°F); FA04÷HAF(BAR , PSI , KPA)
HAF	60.0	Pr1	High pressure alarm set (fan)	LAF÷150.0(°C) LAF÷302(°F) LAF÷FA20(BAR , PSI , KPA)
AFd	5	Pr2	Pressure alarm delay	0 ÷ 255 (min)
HFc	YES	Pr2	Compressor off with high pressure (temperature) alarm	no - yES
HFdP	50	Pr2	Digital Compressor Capacity percentage in case of high pressure (temperature) alarm	0÷80(%)
dHF	5	Pr2	Interval between 2 compressors turning off with high pressure (temperature) alarm	1÷24 (sec.)
PnF	5	Pr2	Fan pressure switch maximum activations	0 ÷ 15
PiF	60	Pr2	Fan pressure switch activations time	0 ÷ 255 (min)
FPr	1	Pr2	Fan ON with faulty probe	0 ÷ 6
dSEP	nP	Pr2	Dynamic Set point function enabled	nP - P3 - P4
dSES	35.0	Pr2	External temperature set for DYNAMIC SET POINT function	-50.0 ÷ 150.0 (°C) -58 ÷ 302 (°F)
dSEb	10.0	Pr2	Proportional band DYNAMIC SET POINT	-50.0 ÷ 50.0(°C) -90 ÷ 90 (°F)
dSEd	0.0	Pr2	Differential for DYNAMIC SET POINT	-50.0÷50.0(°C) -90÷90(°F) - 20.0÷20.0(BAR) -300÷300(PSI) - 2000÷2000(KPA)
AOC	Cur	Pr2	Analogue output working mode	Cur - tEn
AOF	nu	Pr2	Analog output 1 function	nu - lnC1 - lnC2 - lnF
AOM	40	Pr2	Minimum value of analogue output	0 ÷ 100 (%)
AOt	5	Pr2	Time with analog output at max when after exceeding AOM	0÷15s
MPM	100	Pr2	Maximum % variation per minute	nu, 1 ÷ 100%
SAO	80	Pr2	Percentage of analog output in case of probe failure	0 ÷ 100 (%)
AOH	70	Pr2	Maximum analog output percentage when silence mode function is enabled	0 ÷ 100 (%)
tbA	YES	Pr1	Alarm relay silencing	no - yES
OAP	cL	Pr2	Polarity alarm relay	OP - CL
oFF	no	Pr2	off function enabled	no - yES
bUr	YES	Pr2	Buzzer enabled	no - yES
Adr	1	Pr2	Serial address	1 ÷ 247
rEL	3.0	Pr2	Release firmware	Readable only
Ptb		Pr2	Parameter table code	Readable only
Pr2	-	Pr1	Pr2 access	Readable only

Dixell



Dixell S.r.l. - Z.I. Via dell'Industria, 27 - 32010 Pieve d'Alpago (BL) ITALY
Tel. +39.0437.9833 r.a. - Fax +39.0437.989313 - EmersonClimate.com/Dixell - dixell@emerson.com